


Neo-Flex Dual Display Wall Mount

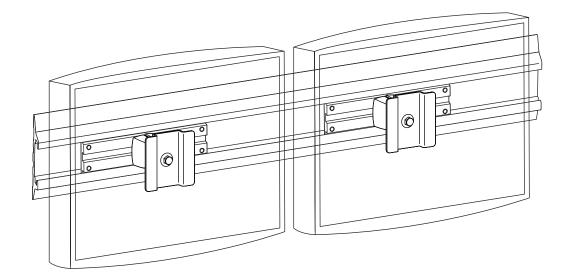


For the latest User Installation Guide please visit: www.ergotron.com



User's Guide - English Guía del usuario - Español Manuel de l'utilisateur - Français Gebruikersgids - Deutsch Benutzerhandbuch - Nederlands Guida per l'utente - Italiano Användarhandbok - svenska ユーザーガイド:日本語 用户指南: 汉语




1 of 9

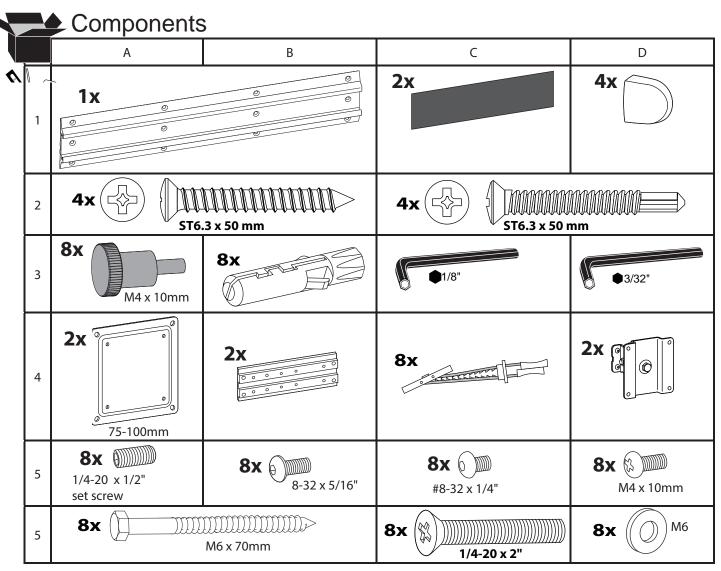




Tools Needed

See Wall Mounting Options for additional tools needed for your type of wall installation.

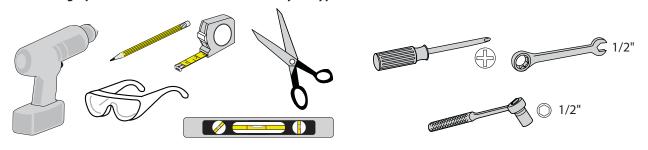

Determine Ergonomic Mounting Height

Set Your Workstation to Work For YOU!

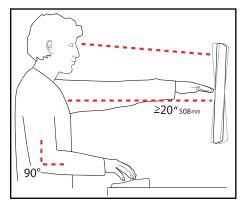

Learn more about ergonomic computer use at: www.computingcomfort.org

Height Position top of screen slightly below eye level.

Position keyboard at about elbow height with wrists flat.

Position screen an arm's length from face—at least 20" (508mm). Position keyboard close enough to create a 90° angle in elbow.

Angle

Tilt screen to eliminate glare.
Tilt the keyboard back 10° so that your wrists remain flat.


To Reduce Fatigue Breathe - Breathe deeply through your nose. Blink - Blink often to avoid dry eyes. Break • 2 to 3 minutes every 20 minutes • 15 to 20 minutes every 2 hours.


888-61-113-G-00 rev.B • 10/15 2 of 9

Wall Mounting Options




Ensure that the wall structure is capable of supporting four times the total weight of mounted equipment. Mounting to wall surfaces that do not meet this criteria may result in an unstable, unsafe condition which could lead to personal injury and/or property damage. Consult a construction professional if you have any doubt about what this means in regard to your particular application.

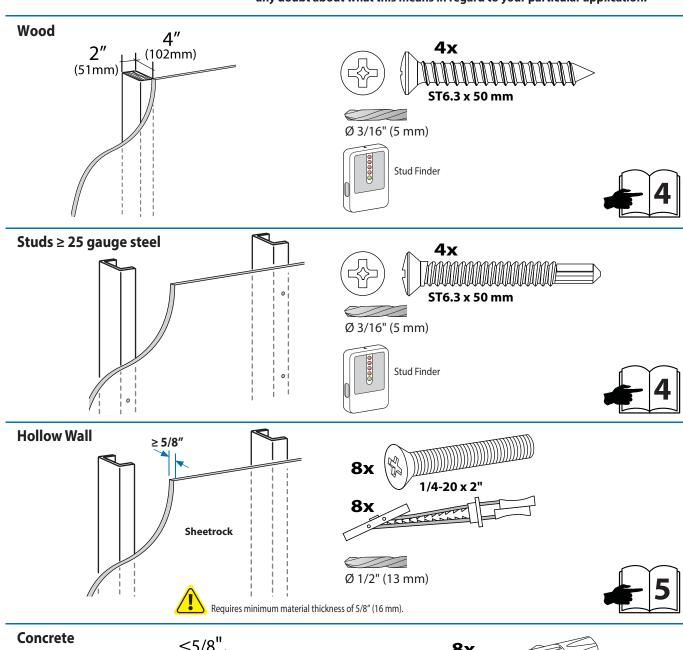


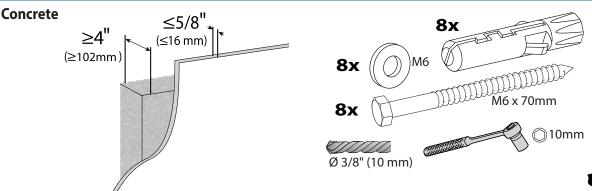



3 Attach to Wall

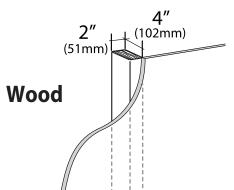


Studs ≥ 25 gauge steel

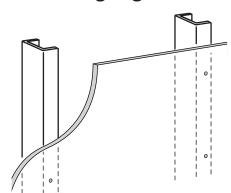


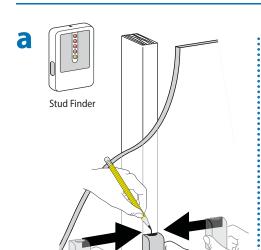


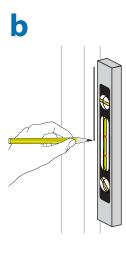

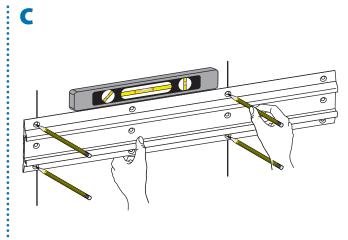



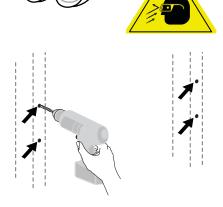

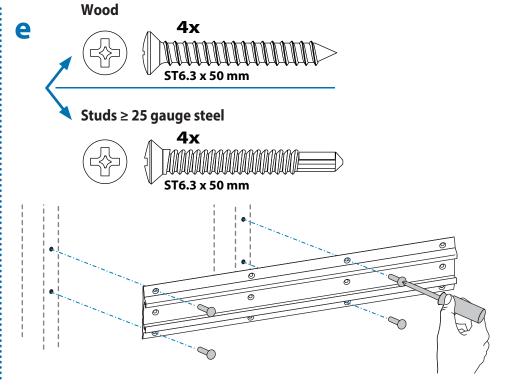





NOTE: Fasteners may unwind due to vibration caused by movement of mounting solution over time. Inspect mounting solution for loose fasteners on a routine basis. If desired, apply a light duty thread locking adhesive to fasteners before installation to prevent back-out.




3 Attach to Wall


Hollow Wall

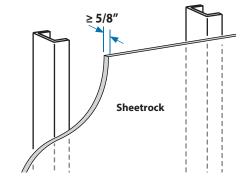


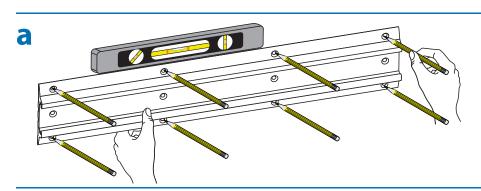

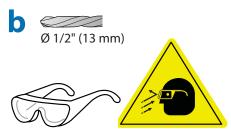





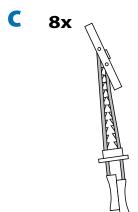


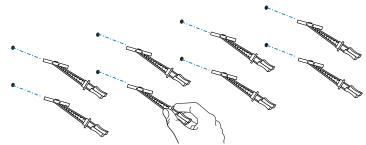

- 1. Push anchor plate into hole. 2. Pull loop back so plate opens flat against inside surface of wall.
- 3. Push collar into hole.

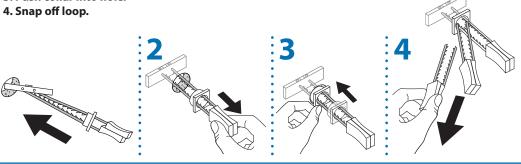

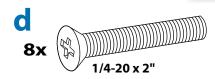


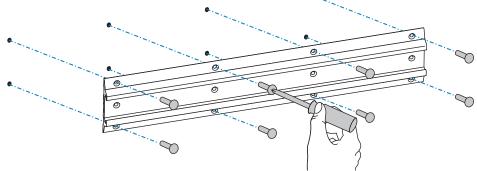




NOTE: Fasteners may unwind due to vibration caused by movement of mounting solution over time. Inspect mounting solution for loose fasteners on a routine basis. If desired, apply a light duty thread locking adhesive to fasteners before installation to prevent back-out.



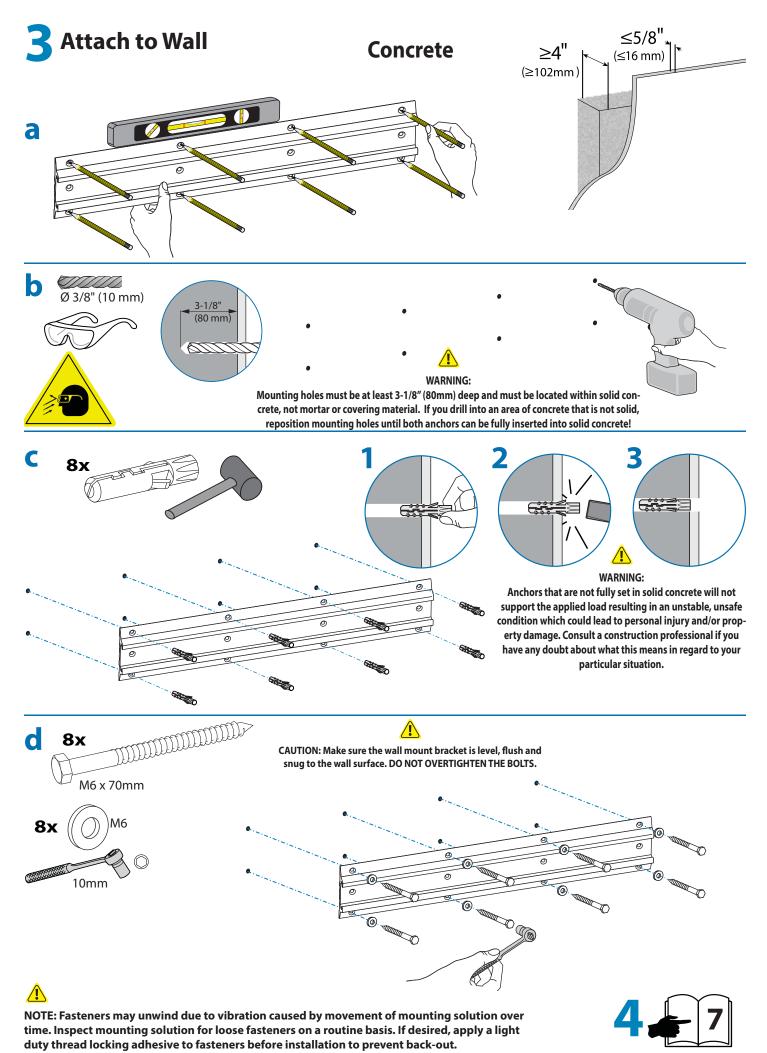



6 of 9


4 Attach Pivots to Brackets

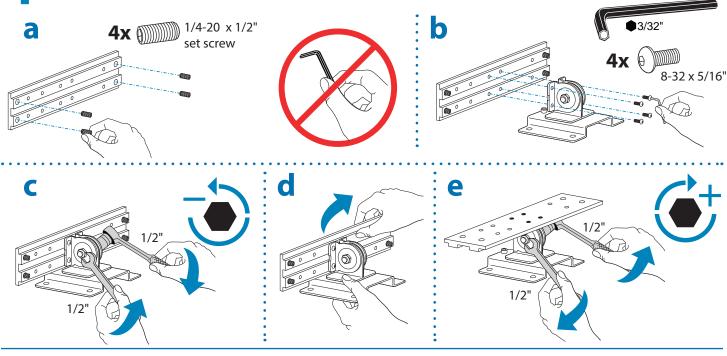




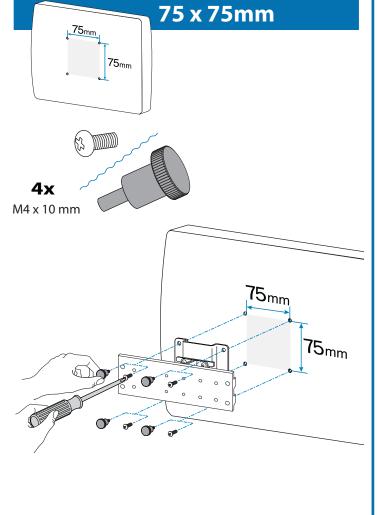

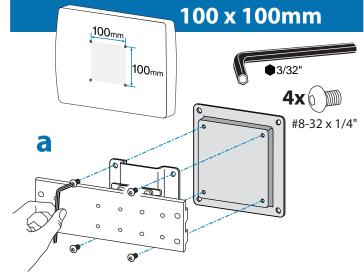

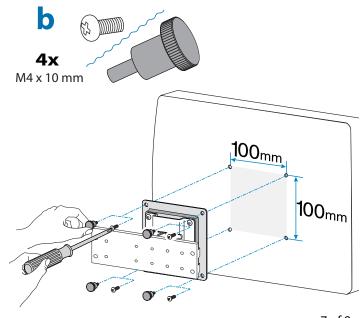


6 Attach Displays to Wall Bracket

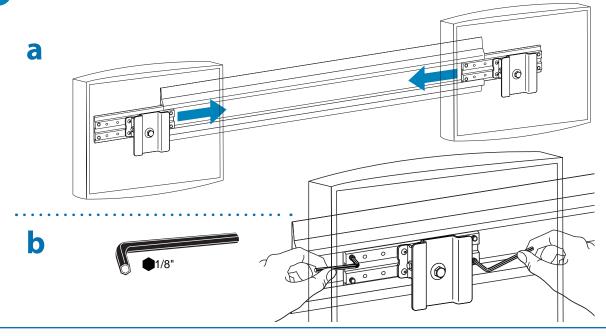

7 Range of Motion


This product is designed to adjust quickly and easily according to your needs – refer to following steps for adjustment.

Tilt – Forward and Backward

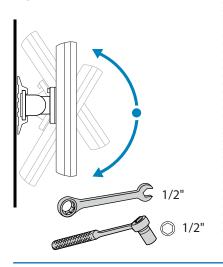

Adjust Tilt – Forward and Backward

If it does not stay in place or movement is stiff, tension needs adjustment. Adjust until motion is equal.

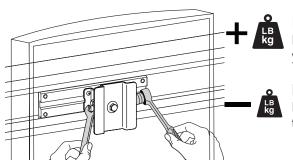


Increase Friction

If this product moves too easily, then you'll need to increase friction:

Decrease Friction

If this product is too difficult to move, then you'll need to decrease friction:


Rotate - Portrait/Landscape

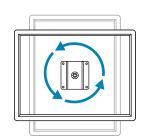




Adjust Rotate – Portrait/Landscape

If it does not stay in place or movement is stiff, tension needs adjustment. Adjust until motion is equal.

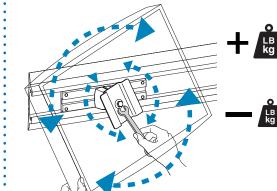

Increase Friction


If this product moves too easily, then you'll need to increase friction:

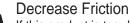

If this product is too difficult to move, then you'll need to decrease friction:


8 of 9 888-61-113-G-00 rev.B • 10/15


8 Attach Pivot Covers

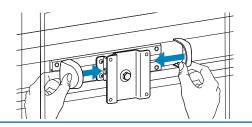





9 Attach Cable Management

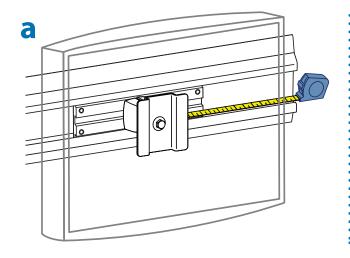

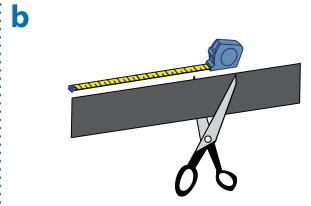

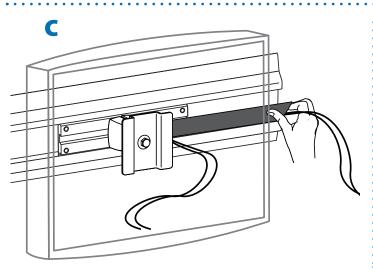

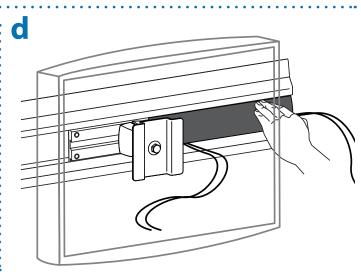

For Warranty visit: www.ergotron.com/warranty

For Service visit: www.ergotron.com

For local customer care phone numbers visit: http://contact.ergotron.com

Americas Sales and Corporate Headquarters	EMEA Sales
1181 Trapp Rd. St. Paul, MN USA (800) 888-8458 +1-651-681-7600 www.ergotron.com sales@ergotron.com	Amersfoort, The Netherlands +31 33 45 45 600 www.ergotron.com info.eu@ergotron.com

APAC Sales Worldwide 0EM Sales Tokyo, Japan www.ergotron.com

www.ergotron.com apaccustomerservice@ergotron.com www.ergotron.com info.oem@ergotron.com

ERGOTRON®

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc.,1181 Trapp Road, Eagan, Minnesota, 55121, USA Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.